
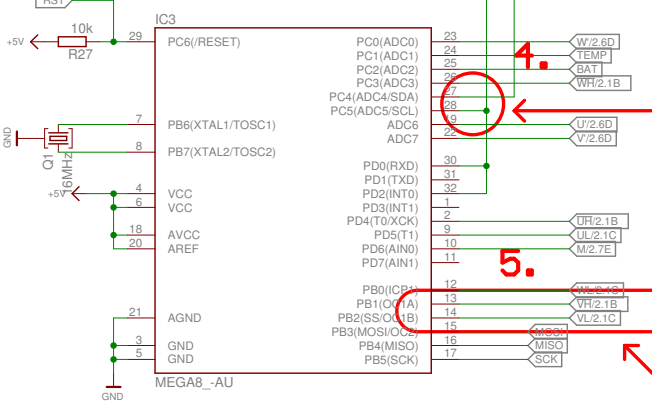


Remove regulator and add wire if you want to power your BLDC-controller from your NG

Change R26 to 0R and remove C13

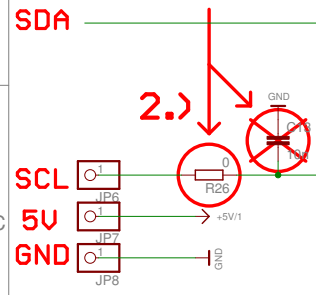

Remove Signals \overline{UH} and \overline{VL} connect Pin 28 and connect a wire for SDA

connect signals \overline{UH} and \overline{VL}

